


HOME DECORATORS COLLECTION

BF-25068 OPEN HUTCH WITH FIXED SHELVES 42H×18W×18D

INV#13636






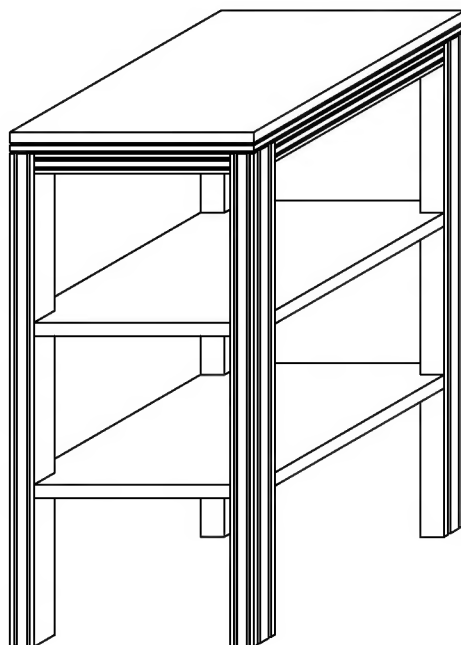






ASSEMBLY INSTRUCTIONS

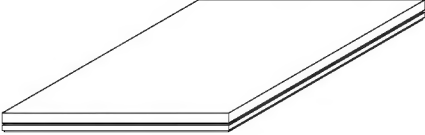






Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

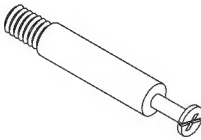

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
A  TOP PANEL-1PC	B  FRONT LEFT FOOT-1PC	C  FRONT RIGHT FOOT-1PC
D  BACK LEFT FOOT-1PC	E  BACK RIGHT FOOT-1PC	F  ACROSS PANEL-2PCS
G  ADORNING PANELS-3PCS	H  BACK ADORNING PANEL-1PC	I  PLATES-2PCS
J  CAM-TOOL-1PC	K  CAM-BOLTS-8PCS	L  CAM-LOCKS-8PCS

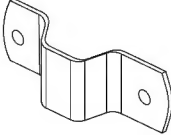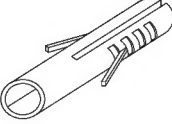M 8mm× 1-1/4"  SCREWS-24PCS	N 7mm× 7/8"  SCREWS-4PCS	O 6mm× 3/4"  SCREWS-4PCS
P  HOOKS-4PCS	Q  GECKOS-4PCS	R  PLASTIC BELTS-2PCS
S 7mm× 5/8"  SCREWS-8PCS		




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

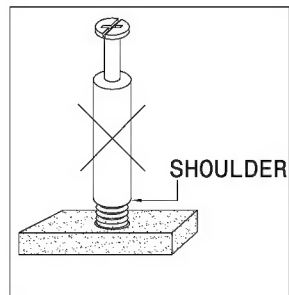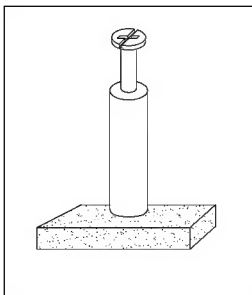


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

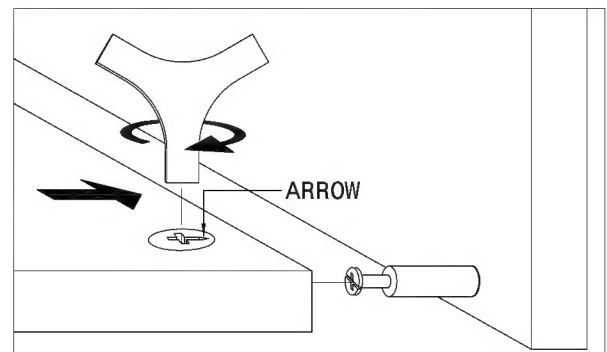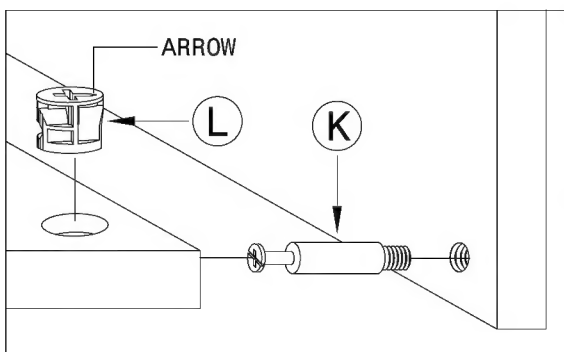


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

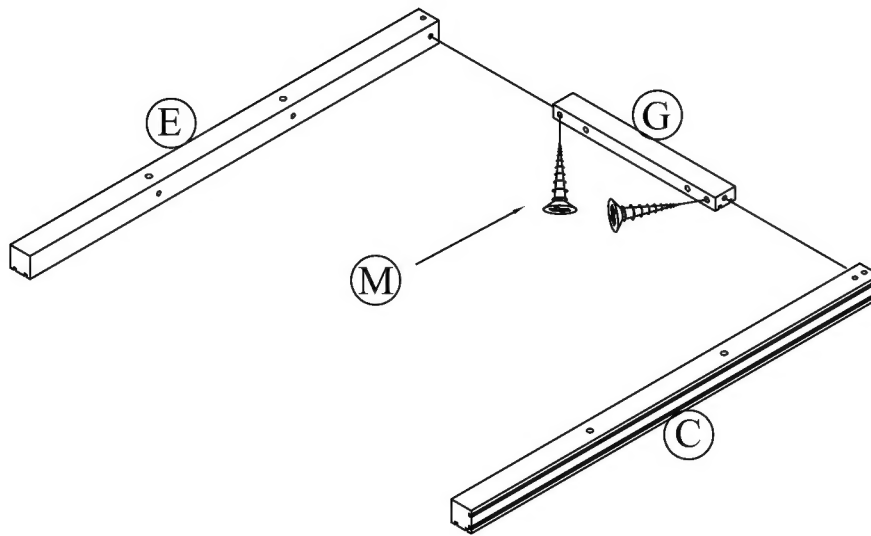


1) . ASSEMBLE THE ADORNING PANEL (G) .

- ATTACH THE ADORNING PANEL (G) TO FOOT (C/E) USING 2 SCREWS (M) .

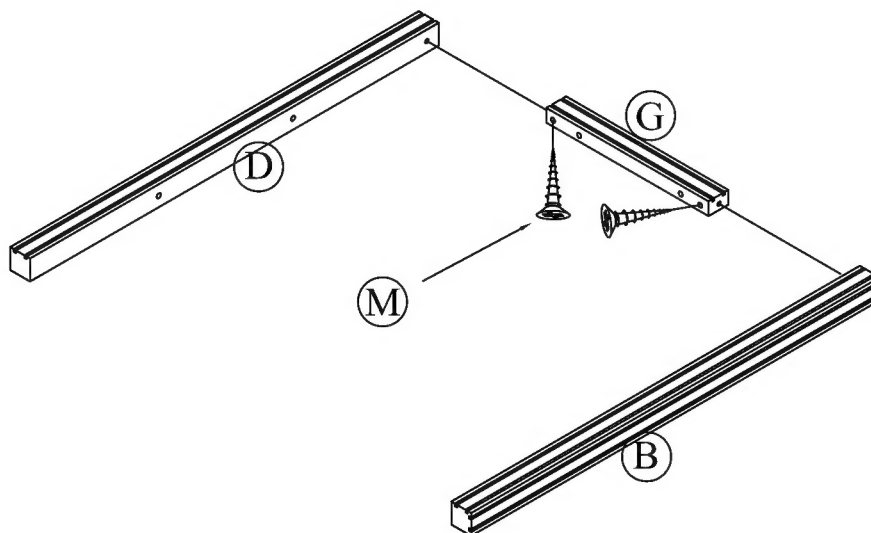


2) . ASSEMBLE THE ADORNING PANEL (G) .

- ATTACH THE ADORNING PANEL (G) TO FOOT (B/D) USING 2 SCREWS (M) .

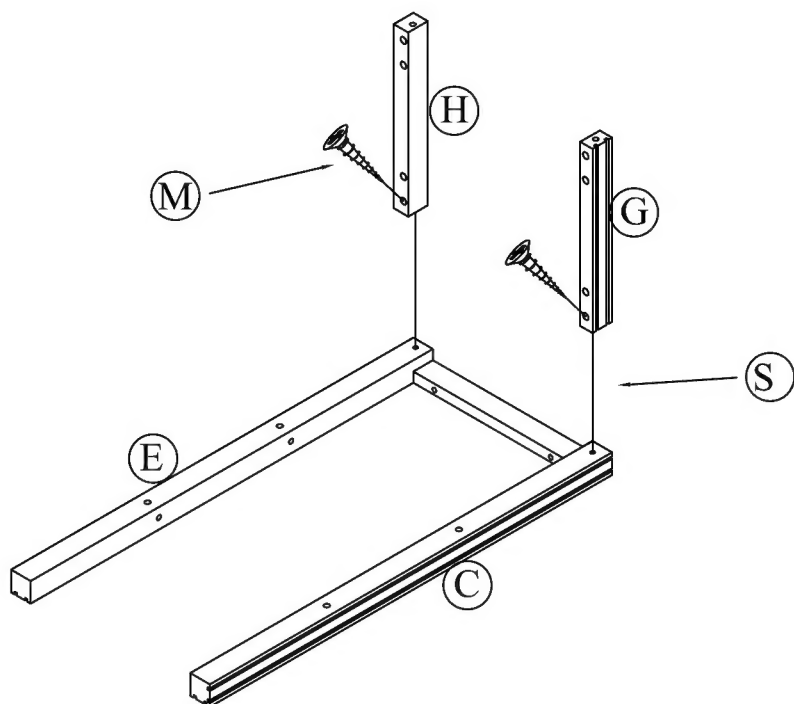


3) . ASSEMBLE THE PANEL (H/G) .

- ATTACH THE PANEL (H/G) TO FOOT (C/E) USING 2 SCREWS (M) .

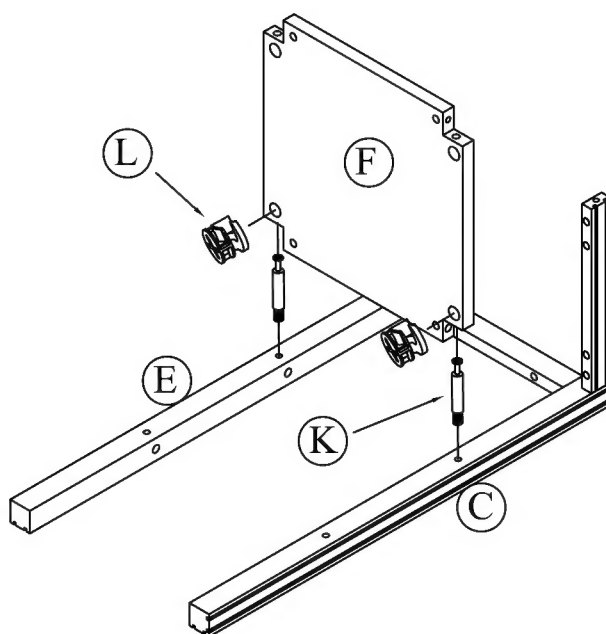


4) . ASSEMBLE THE ACROSS PANEL (F) .

- ROTATE 2 CAM-BOLTS (K) INTO THE HOLES IN THE FOOT (C/E) .
- PLACE CAM-BOLTS (K) INTO THE HOLES IN THE PANEL (F) AND ATTACH USING 2 CAM-LOCKS (L) .

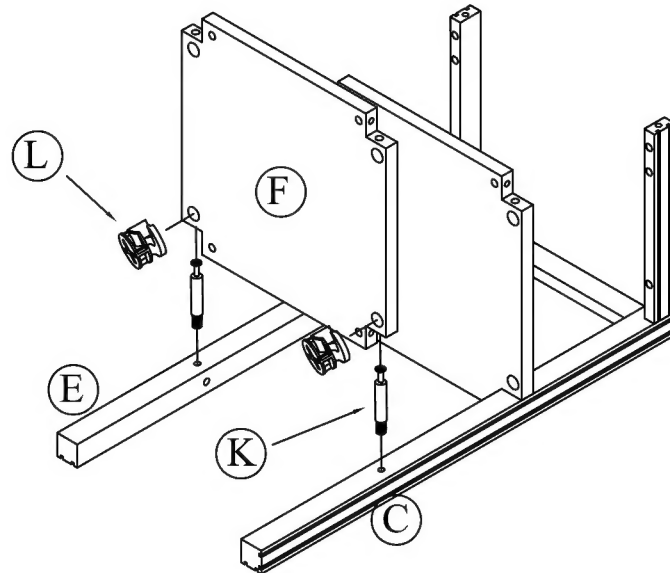


5) . ASSEMBLE THE ACROSS PANEL (F) .

- ROTATE 2 CAM-BOLTS(K) INTO THE HOLES IN THE FOOT(C/E) .
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE PANEL(F) AND ATTACH USING 2 CAM-LOCKS(L) .

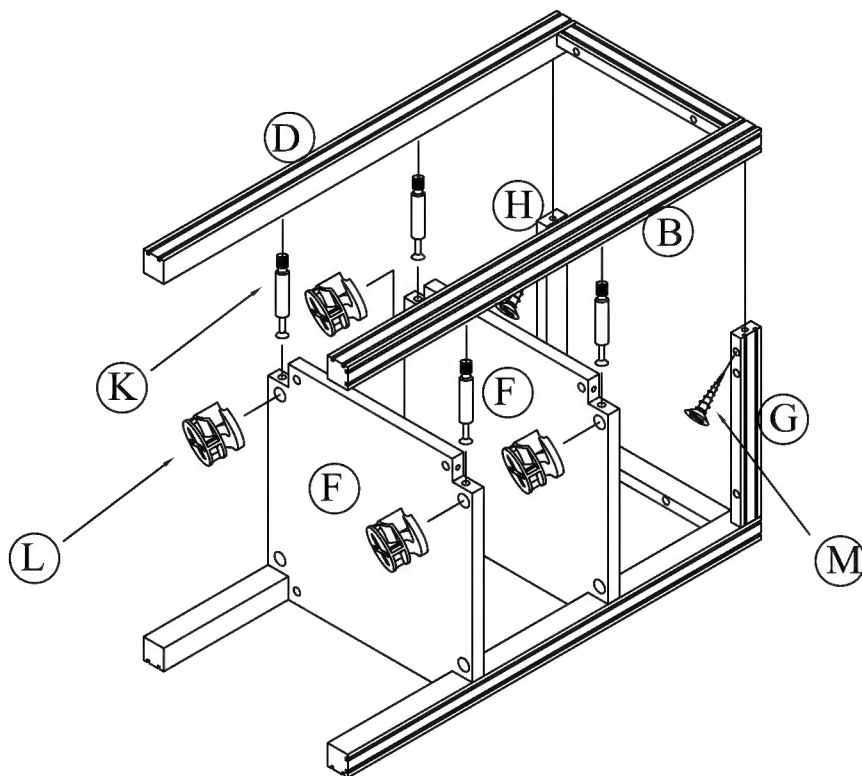


6) . ASSEMBLE THE FOOT (B/D) .

- ROTATE 4 CAM-BOLTS(K) INTO THE HOLES IN THE FOOT(B/D) .
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE PANELS(F) AND ATTACH USING 4 CAM-LOCKS(L) .
- ROTATE 2 SCREWS(M) INTO THE HOLES IN THE PANEL (G/H) .

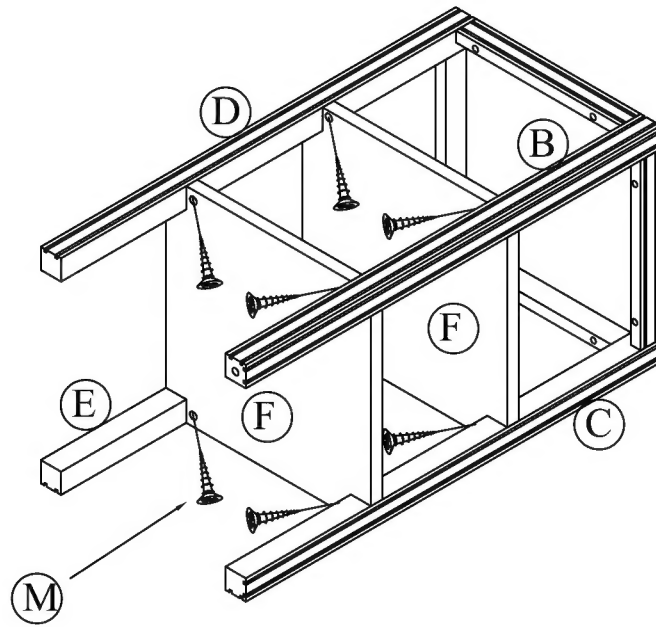

7) . ASSEMBLE THE ACROSS PANELS(F) .

- ROTATE 8 SCREWS(M) INTO THE HOLES IN THE ACROSS PANELS(F) .

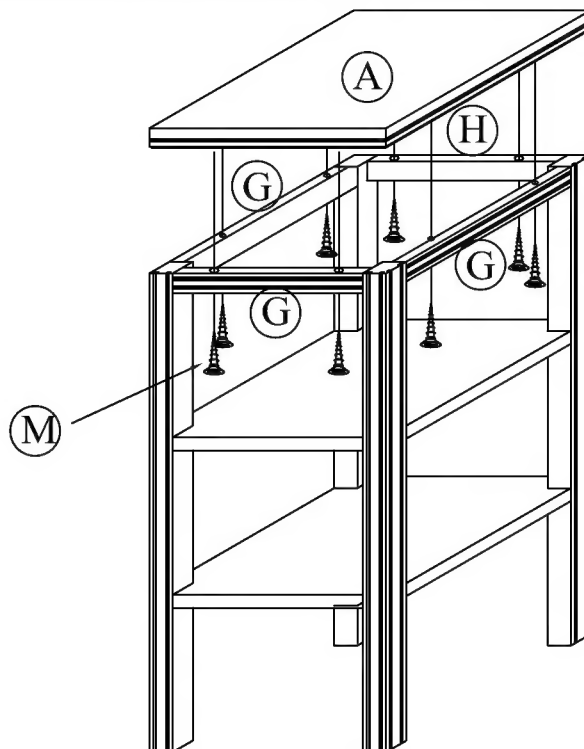


8) . ASSEMBLE THE TOP PANEL(A) .

- ATTACH THE TOP PANEL(A) TO PANEL(G/H) USING 8 SCREWS(M) .




Warning

The anti-tip hardware must be used as part of assembly!

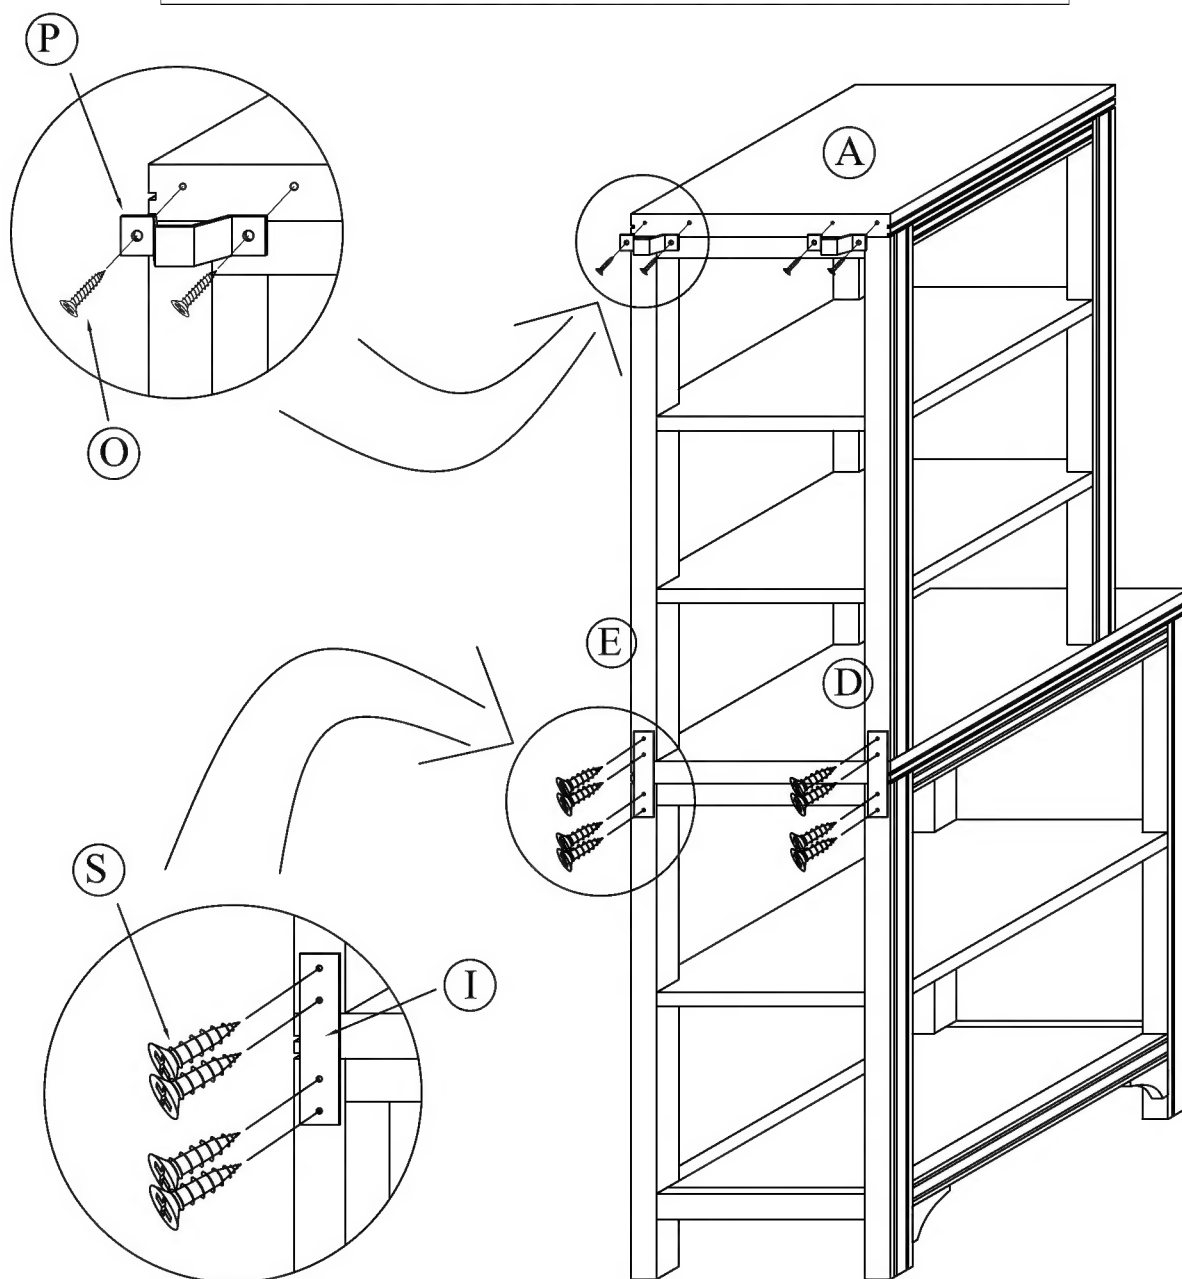

9) . ASSEMBLE THE HOOKS(P) .

- ATTACH 2 HOOKS(P) USING 4 SCREWS(O) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A) .
- ATTACH 2 PLATES(I) TO FOOT(E/D) USING 8 SCREWS(S) .

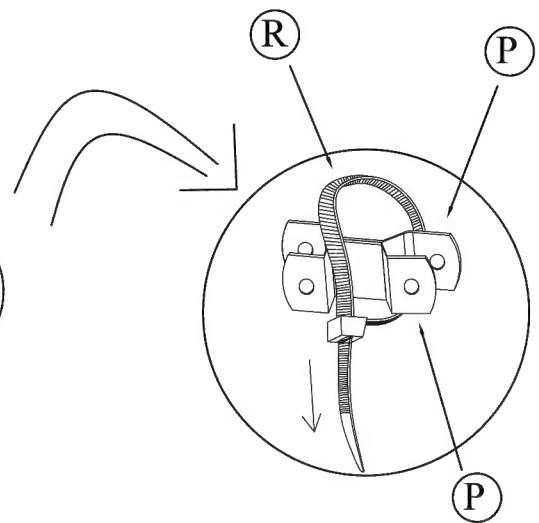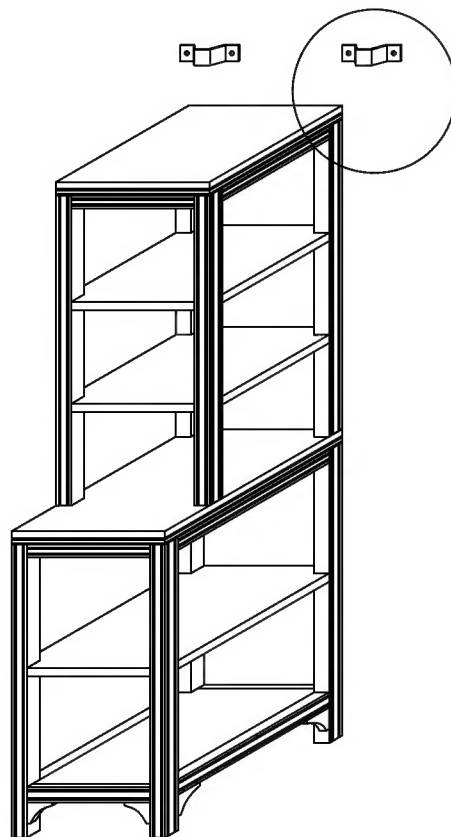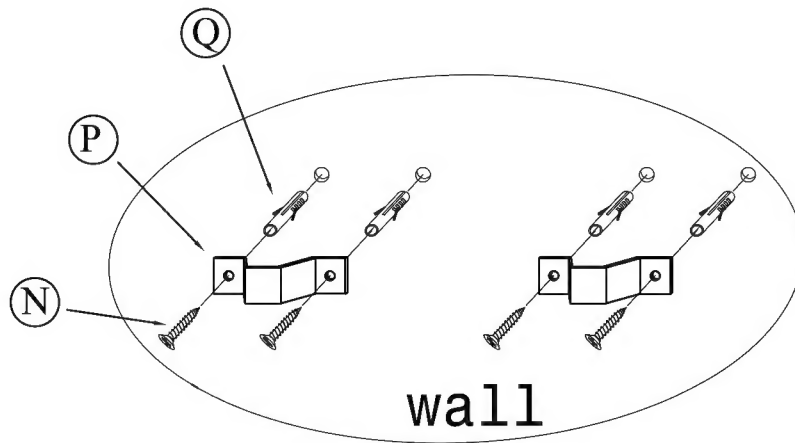

10) .ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(Q) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(N) INTO THE GECKOS(Q) .
- CONNECT THE TWO HOOKS(P) WITH A PLASTIC BELT(R) .